

VAPORE 2800 INOX

**IT IS RECOMMENDED TO CAREFULLY READ THE FOLLOWING MANUAL
BEFORE USING THE MACHINE.**

Technical Features

MODEL : *VAPORE 2800 INOX*

- MAXIMUM PRESSURE: 5,5 bar
- POWER SUPPLY: SPECIFICATIONS WRITTEN ON THE MACHINE'S PLATE.
- INSTALLED CAPACITY: 1,4 Kw
- BASIC CONSTRUCTION MATERIAL: Stainless steel AISI 304 (boiler, heating elements, body)
- AUTONOMY: UNLIMITED
- VAPOR TEMPERATURE: 145°C / 295 F°

CERTIFICATIONS

- **Vapore 2800 INOX** is a CE/ETL Canada/USA certified product.

For service contact:

VPR Impex Inc.

3755 Hickmore

Ville St-Laurent, QC, Canada

H4T 1S5

(514) 733-2906

info@vprimpex.com

www.vprimpex.com

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THE VAPOR CLEANING SYSTEM

When using the Cleaning System, always use basic precaution, including the following:

Warning- To reduce the risk of fire, electrical shock or injury:

1. Do not leave appliance when plugged in. Unplug the Cleaning System from outlet when not in use, or before servicing.
2. The Cleaning System is designed and manufactured according to the best reliability and safety techniques; however the Cleaning System is not meant to be used by minors. Do not allow the Cleaning System to be used as a toy. Close attention is necessary when the system is being used around minors. Never allow minors to use or play with the system.
3. Use only as described in the manual. Only use original manufacturer attachments.
4. Do not use the Cleaning System with a damaged cord or plug. If the Cleaning System has been dropped, damaged, left outdoors, or submerged in water, contact an Authorized Service Center.
5. Do not pull or carry Cleaning System by the cord.
6. Do not use the cord as a handle. Never close the door on the cord. Never pull it around edges or corners. Never run appliances over the cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling the cord. To unplug, grasp the plug, not the cord.
8. Do not handle the plug with wet hands.
9. Do not spray any water on the Cleaning System.
10. Do not pull the Cleaning System by the hose; be sure to use the handle on the Cleaning System.
11. Do not allow objects to get into the output nozzles. Do not try to operate the Cleaning System with any of the openings blocked. Keep opening free of dust, lint, hair or anything that will reduce the vapor flow.
12. Keep all parts of the body away from output nozzles and moving parts of the System.
13. Use extra care when using the Cleaning System on stairs.
14. Use extra care when cleaning around a water source (swimming pools, spas, toilets, etc.)
15. Do not use the Cleaning System to clean animals.
16. Never aim the vapor jet towards electrical or electronic appliances, people or animals.
17. Turn off all controls before unplugging the Vapor System.
18. Do not fill the Cleaning System with anything other than clean tap water.
19. To reduce the risk of electrical shock- use indoors only.
20. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
21. Plug the Cleaning System to power outlets with a properly grounded electrical system.
22. Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
23. **Before opening the boiler's water drain cap, make sure there is no pressure and the Cleaning System has been off for at least 5 hours.**
24. Use ONLY drinkable tap water: do not use distilled water and do not insert chemicals in the fresh water tank.
25. Do not introduce other flammable liquids, acids and/or other objects in the tanks.
26. While using the accessories, never touch the metal ending parts: it is easy to get burnt.
27. Do NOT unplug either the accessories or the hose while the Cleaning System is generating vapor to avoid getting burnt.
28. Be sure that accessories are properly locked on the hose by turning the red collar.
29. Avoid shaking the Cleaning System while it is working (a misreading of the water level in the tank and in the boiler could occur).
30. The refilling pump periodically switches on, at regular intervals, producing an internal buzzing sound, which is perfectly normal.
31. The Cleaning System is fitted with a series of safety devices that make Cleaning System reliable and safe. For this purpose, we indicate in particular, that in case the safety valve activates, for a couple of seconds, vapor will come out from the bottom of the Cleaning System and a loud sound will be heard with a high pitch hiss; all this happens under maximum safety limits and should not worry the customer.
32. The bottom of the Cleaning System is hot; USE CAUTION if you have to lift the Cleaning System.
33. In the injection model, DO NOT pour any liquid other than mild/light detergents or disinfectants in the external injection tank (no bleach, acid, corrosive liquids, etc...). Also make sure the detergents or disinfectants do not become toxic in contact with vapour at high temperature or when heated over 90°C /190° F.

Section 1- GETTING STARTED

1.1 The Control Panel



Figure 1- Control Panel

Lights

- **Orange Light: Economy** (see section 1.3) –Light on: economy engaged, Light off: Normal Function, Light Flashing: heating elements off
- **Yellow light: Water refilling**, it indicates the absence of water in the external tank and it stops the generation of vapor, until water is added to external tank. This is to avoid damage to the heating elements.
- **Green light: OK**, it indicates that maximum working pressure has been reached. While using the machine this light will change between solid and flashing, according to the vapor pressure reached in the boiler. Light on (solid): machine is ready and elements are off, Light flashing: heating elements are on, light off: heating elements are off.
- **Red light: Water replace**: it has many functions; it indicates the need of a water replacement in the boiler. If water has been changed in the boiler and the system reset (refer to section 3.1) has been performed, but the light is still on, this may indicate a temporary malfunctioning of the refilling mechanism. When the red light is on, all the machine functions are deactivated.

Other Elements Found on Control Panel

- **Pressure gauge**: it indicates the vapor pressure in the boiler.
- **Pressure regulator**: used to control the force of the pressure released by machine
- **Economy button**: used to engage economy function (see section 1.3)
- **On/Off switch**: used to turn machine ON and OFF

1.2 Turning Machine ON

Place the machine on a horizontal surface to avoid misreading water levels.

Connect **VAPORE 2800 INOX** to a grounded power outlet. Make sure the power outlet can bear the machine power (look at the technical features on the machine).

VAPORE 2800 INOX is switched on by pressing the ON/OFF button (refer to fig. 1)

- button in "0" position ⇒ **VAPORE 2800 INOX** is turned OFF
- button in "I" position ⇒ **VAPORE 2800 INOX** is turned ON

To indicate that the machine is heating, the green light “**OK**” will flash.

After the heating process ends (12-15 minutes) and **the machine is ready to use**, the green light “**OK**” will turn solid.

Note: It is advisable, in the warm-up phase, not to use the “*Economy*” function (the corresponding light signal must be off).

1.3 The Economy Function

VAPORE 2800 INOX can work in normal mode or in *Economy* mode. The *Economizer* switch allows the user to switch from normal function into *Economy* mode, and vice versa. The *Economy* function allows one of the heating elements to be deactivated, thus reducing the power absorbed by around 40%.

Note: The *Economy* function **doesn't change** **VAPORE 2800 INOX's** cleaning and sterilising capability. However, we suggest you use this function only after the warm-up phase: if not, the time necessary for the appliance to heat will increase.

1.4 Accessories (this varies according to the machine chosen):

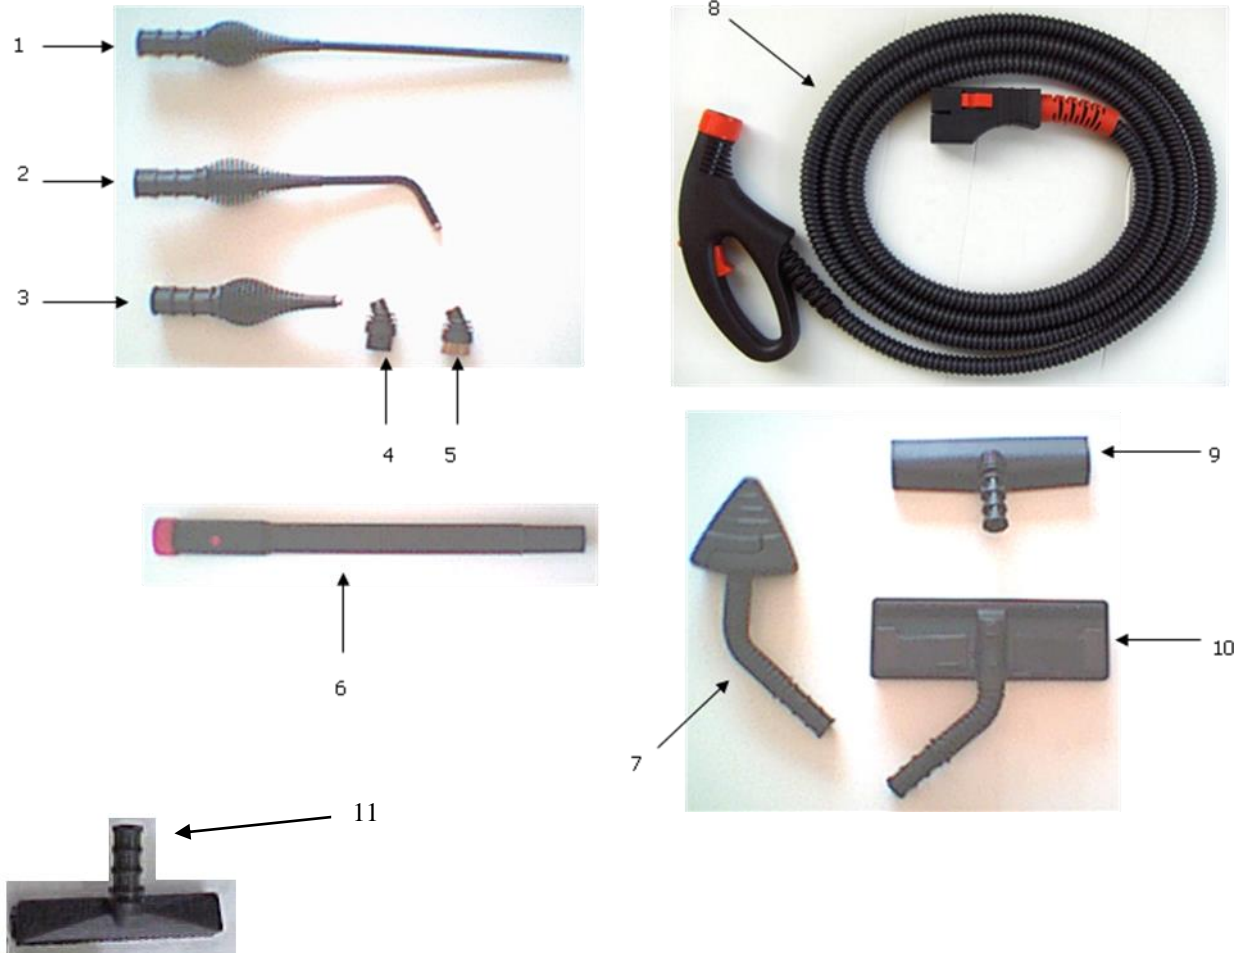


Figure 2- Standard accessories included with this model

ACCESSORY LIST

POS.	DESCRIPTION	CODE
1	NOZZLE WITH STRAIGHT EXTENSION	C500
2	NOZZLE WITH CURVED EXTENSION	C502
3	NOZZLE	C498
4	1" NYLON BRUSH	C504
5	1" BRASS BRUSH	C506
6	EXTENSION PIPE, VAPOR, WITH RED RING (x2)	C490
7	BRUSH, TRIANGULAR BLACK	C494
8	FLEX HOSE-VAPOR, HANDGRIP, 04mt DOUBLE-BUTTON	C9134
9	WINDOW WIPER	C496
10	LARGE BRUSH, FOR FLOOR, RECTANGULAR	C492
11	SMALL BRUSH RECTANGULAR 6"	C510

Section 2- USING THE MACHINE

2.1 Connecting your Hose and Accesories

The flexible hose is connected to the vapor outlet on the machine by inserting the proper tube end to the outlet at the machine's base (refer to fig. 3).

Turning the locking ring clockwise allows you to connect the accessories. After the accessory is connected, turn the locking ring counterclockwise to lock it into place.

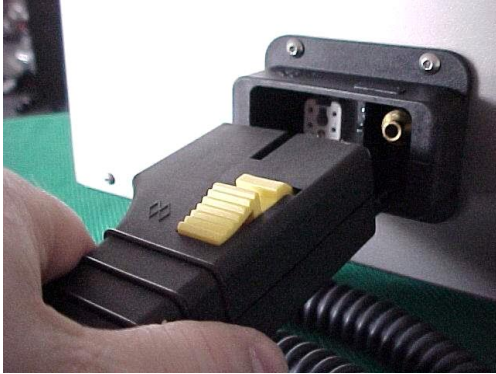


Figure 3



Figure 4

2.2 Generating Vapor

The handle on the end of the hose has a trigger to control the vapor output. By pressing the trigger, vapor comes out; by releasing the trigger, the output is stopped (refer to fig. 4).

When the “**OK**” green light turns on, **VAPORE 2800 INOX** is ready to generate vapor. However, after the initial heating, it is advisable to release the air in the system by pressing the trigger on the handle for a few seconds; when the “**OK**” green light turns on again; the machine is ready for optimal usage.

It is advisable not to use the hose without any accessories, as this will lead to the formation of extra condensation drops.

Note: Vapor distribution is preceded by a few sprays of water: this is caused by the normal formation of condensation in a cool hose. It is, therefore, advisable to direct the first distribution on a cloth, to avoid wetting the surfaces that need to be cleaned.

To fully use **VAPORE 2800 INOX**'s power, it is advisable to regulate the vapor output according to the accessory used and to the surface to be cleaned; this is achieved by rotating the regulator knob on the control panel (see section 1.1)

2.3 Water Refill in the Tank

When the water in the tank is finished, **VAPORE 2800 INOX** stops the vapor distribution signalling this by turning the yellow light on (see section 1.1), showing that a water refill is necessary. Remove the tank cap and add approximately one litre of water. The machine will be ready to resume working 3 - 4 seconds later.

It is advisable to perform this operation while the appliance is turned off. Once this operation is done you may then turn the machine back on (no waiting time is needed).

Section 3- MAINTENANCE

3.1 Water Replacement in the Boiler

Why replace water?

After about 100 litres of water have been used, it is advisable to replace the water in the boiler. This operation **is necessary to eliminate the impurities left in the boiler** (limestone and other solid suspensions in the feeding water).

How often you should perform this replacement depends on the impurities contained in the water and how often the machine is used.

When is it time to replace the water?

If the “**WATER REPLACE**” red light turns on, the machine will have entered emergency mode, this means that the water in the boiler is full of limestone/calcium, therefore a water replacement is needed. It is strongly recommended to replace the water before the red light turns on (**at least once a month**).

How to change water in the boiler

1. Ensure that the machine is disconnected from the power supply.
2. Ensure that the boiler is not pressurised and that **VAPORE 2800 INOX** has not been used **for at least 5 hours**.
3. Using the special wrench you have been provided with, unscrew the plug positioned under the machine.
4. Drain all the water contained in the boiler (if possible, insert a water hose into the boiler to give a thorough rinse).
5. Screw the plug back on, making sure that it is properly tightened, replace plug o-ring if needed.
6. Turn the machine on; the electronic board will automatically fill the boiler.

*****ATTENTION***** *System Reset*

During the automatic boiler-filling phase, the “WATER REPLACE” red light will turn on and refilling will stop indicating the first refilling cycle has ended. To finish the boiler refilling operation, turn VAPORE 2800 INOX off (for 30 seconds) and then back on. Be advised that for a complete refilling of water in the boiler, two or three refilling cycles may be necessary.

Note: In some cases water replacement is necessary even for a new machine. This is normal and is caused by the possible impurities accumulated by the water during testing.

3.2 Cleaning your Accessories

Accessories are cleaned using **VAPORE 2800 INOX** itself. After their usage, clean brushes and accessories with the supplied nozzles (accessory #2 & #3 on fig. 2).

3.3 “O-ring” Substitution

O-rings are located on the hoses and extension tubes. If water or vapour escapes from the joints between accessories, or from the flush plug (located under the machine) it may indicate it is time to change the O-rings. Extra O-rings are supplied with each machine. For information on performing this operation contact an Authorised Service Centre.

3.4 Greasing

All accessories joints are to be greased at least every 2 - 4 months, in particular the nozzle on the machine's vapor outlet (refer to fig. 3) and the vapor connector inside the hose handle. This will increase the longevity of the O-rings.

3.5 Boiler's Decalcification

An optional boiler cleansing can be performed upon request. For more information contact an Authorized Service Centre.

Section 4- WARRANTY

Every single **VAPORE 2800 INOX** is severely tested before it is shipped.

The warranty lasts **ONE YEAR** on the system and accessories against manufacturing defects, and **THREE YEARS** on the boiler and heating elements against manufacturing defects.

The warranty does not include those components subject to wear and tear (O-rings, brushes, filters, etc...)

The warranty ends in case of: machine tampering or opening; an evident, verified wrong usage; a usage of the machine not in compliance with the instructions of this manual, any liquid **OTHER THAN WATER** used in the water only reservoir.

The warranty starts from the date of the invoice.

Transportation costs, for the machine repair, to the Authorised Service Centre, are to the customer's complete charge.

Section 5- WHAT TO DO IN CASE OF...

The time necessary for the water to warm up has increased considerably (by more than 8 minutes)

- Perform water replacement of the machine (see section 3.1 for details)
- Machine is in Economy mode. Switch into normal mode (refer to section 1.3).
- If problem persists contact an Authorised Service Center

The “WATER REPLACE” red signal light turns on

- Perform water replacement of the machine (see section 3.1 for details)
- Perform Reset procedure (see section 3.1 for details)
- The pump is being obstructed by dirt or air bubbles: turn the machine off, wait about one hour and then restart the machine.
- Distilled water has been used: empty the tank and fill it with tap water.
- If problem persists contact an Authorised Service Center

The “WATER REPLACE” red signal light starts flashing

- Contact an Authorised Service Centre

VAPORE 2800 INOX is not generating vapor

- The regulation knob is completely closed. Open it.
- There is no water in the tank (the yellow light is on). Add water (refer to section 2.3)
- The hose is not properly connected to the machine. Be sure that it is properly connected.
- The red light “Water Replace” turns on and the machine runs the safety phase. (See instruction above).
- Make sure that the machine is properly connected to a power supply and there is current flowing.
- The machine is not turned to the ON position (refer to section 1.2)
- If problem persists contact an Authorised Service Center

Vapor is coming out from the safety valve (under the machine)

- The safety valve has intervened. Contact an Authorised Service Centre.

The machine does not reach the working pressure

- Improper connection of the machine to a power supply.
- Lack of water in the external tank: verify quantity of water and add if needed (refer to section 2.3).
- If problem persists contact an Authorised Service Center

There is power supply shortage

- Make sure that other appliances (ovens, fridges, etc.) are not connected to the same power line since this may not be compatible with the electrical system peak load.
- Make sure that the power outlet fits the machine and make sure that safety devices are installed to protect the electrical system. Be aware of the machines electrical power (look at the data panel) and connections are compatible.
- If problem persists contact an Authorised Service Center

The accessories’ connections are leaking

- Make sure that the “O-rings” on vapor outlet nozzle are in good conditions and correctly assembled.
- Grease the vapor outlet and/or replace the “O-rings”.
- If problem persists contact an Authorised Service Center

ATTENTION !

Be sure that extension tubes are properly locked

Locked



Unlocked



For service contact:

**VPR Impex Inc.
3755 Hickmore
Ville St-Laurent, QC, Canada
H4T 1S5
(514) 733-2906
info@vprimpex.com
www.vprimpex.com**